



Experience multi-detail scoring with the first portable, real-time shot detection device.

Firmware update Guide.

www.eleyxshot.com

CONNECT WITH ELEY, CONNECT WITH THE WORLD®

1.



Before clicking the download button ensure your device is connected to the internet, if not you will see a message "can't upload, check connection to device Wi-Fi"

To check the latest Firmware version click "Download".

2.



Connect your mobile device to the internet before clicking on the "Download" button.

To start the Firmware update process, click on the "Settings" icon. You have two options "BLACKBOX" and "Camera".

3.



. .



Click the "Check Firmware Updates" button.

Click the BLACKBOX "Download" button.

5.









When you have downloaded both the Blackbox and Camera Firmware connect your device to the ELEY x-shot Wi-Fi Hub. Once connected return to the "Settings" page on the app.

6.



<u>'</u>'



Click the "Upload Black Box" button.

Do not turn off your ELEY Wi-Fi hub. You can press any button apart from the red one.







When updating the ELEY x-shot Wi-Fi hub firmware, the system restarts with a new password.

Please connect to your hub again using the setup QR code.

You can check the new firmware version on the screen of the ELEY x-shot Wi-Fi hub. Scroll to the "Info" page.

Connectivity Information.

10.

12.



11.



Navigate to the "Setting" page.



Click the "Upload CAMERA" button.

Failure to update the camera is displayed whether a camera is present or not in the slot of the ELEY x-shot Wi-Fi hub, or if there is a problem with the camera.

Click any button except for the red button to exit the message screen.

Note the screen on the ELEY x-shot hub.

Failure to update notice.

14.



15.



You can check the new firmware version on the screen of the camera.

The firmware update is now complete and you can return to the home page of the ELEY x-shot app.